

Menu System



The **HOME Screen** displays flow volume, direction of the flow total and flow RATE along with status conditions such as Empty Pipe. Two buttons below the LCD display are used to access menu screens for viewing and changing meter setup parameters.

These two buttons are light sensors which can detect when a finger is covering them. Only three button touch actions are needed to control navigation through the menus, settings changes and back to the home screen.



HORIZONTAL SCROLLING:

Tap right-hand button to scroll horizontally through menu tabs or move horizontally within a tab dialog when applicable.



SELECT: Tap left-hand button to change a highlighted item within a tab dialog.



ENTER/EXIT: Hold left button while tapping right button once to enter or exit a tab dialog or to navigate between the HOME and other menu screens.


All menu screens consist of two rows of tabs surrounding a dialog box that lets you view and change setup parameters. To enter the Menu System perform the hold and tap sequence.



Changing Settings


T UNIT

View or change TOTAL volume units

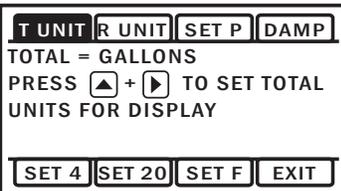


R UNIT

View or change flow RATE units

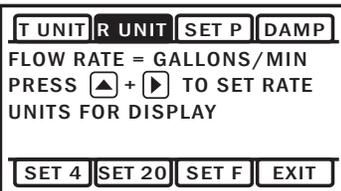


Set P

View or change pulse output scaling

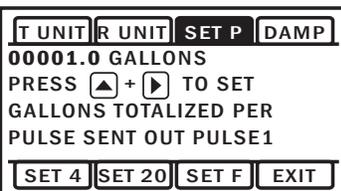


DAMP

View or change # of samples for rolling average.

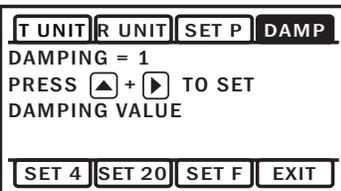

EXIT

Return to HOME SCREEN or enter SUBMENU

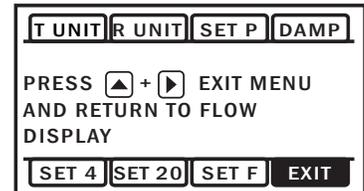

The **EXIT** tab in the MAIN MENU has a second function. If you tap five times, you will be redirected to a SUBMENU screen from which you can access additional options.

INFO: Meter model, serial number, firmware version