




Wiring

Remote Meter: Unscrew the user access lid and remove it. Remove the 5 pin screw connector from its socket. Install the wires through the cable port into the 5 pin screw connector in their respective locations. Plug the 5 pin screw connector into its socket. Refer to the complete manual for further details.




Black (R) -Remote Pwr: pn2
Red (R) +Remote Pwr: pn1
Orange (R) Remote B: pn4
Blue (R) Remote A: pn5

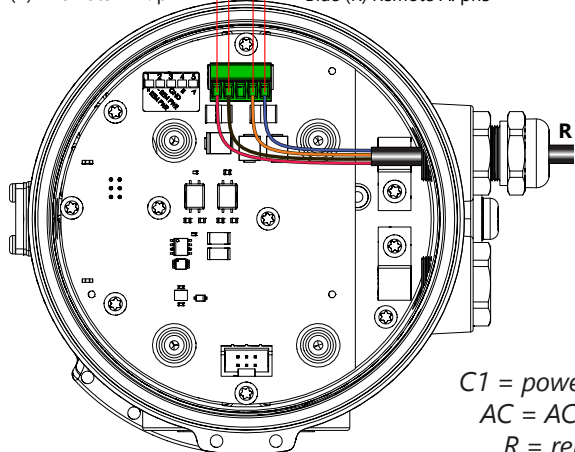



Remote Meter

Remote Display: Remove the 3 screws holding the display assembly and remove it from the meter. Remove the 15 pin screw connector from its bag. Install the wires through the cable ports into the 15 pin screw connector in their respective locations. Plug the 15 pin screw connector into its socket. **Be sure all pins align properly and that the connector has not slipped to one side.** Refer to the complete manual for further details.


Orange (R) Remote B: pn11
Blue (R) Remote A: pn12
Black (Internal): pn14
Red (Internal): pn15
Black (R) -Remote Pwr: pn10
Red (R) +Remote Pwr: pn9
Green (C1) Pulse+: pn2
White (C1) Pulse-: pn1

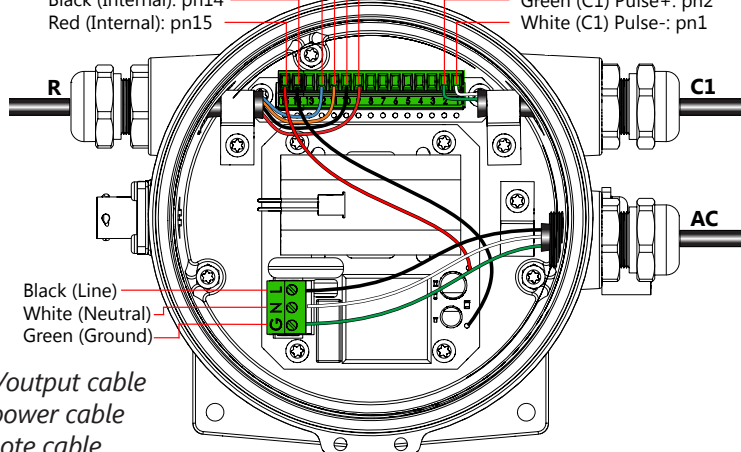

Remote Display

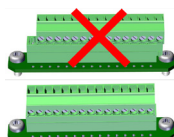 

Be sure all pins align properly and that the connector has not slipped to one side.

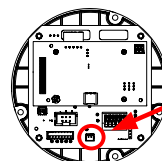

Plug the backup battery cable into the back of the display assembly.


WARNING: BACKUP BATTERIES ARE NOT INTENDED AS A PRIMARY POWER SOURCE




WARNING: Improper sealing of glands or cables will invalidate any warranty. If plugs or cable glands are removed, reinstall using Teflon pipe sealant, or tape, to ensure maximum moisture protection.



Remove plug & o-ring. Insert cable gland/strain relief. Feed cable through cable gland.

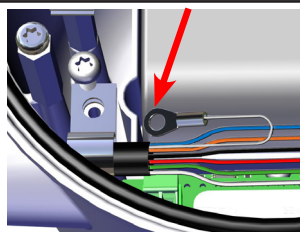

Clamp cable with strain relief clips. Attach drain wire lug to bracket post.

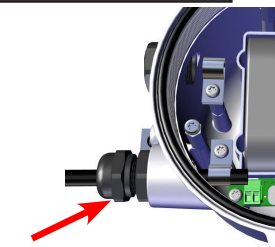

CRITICAL!
Torque cable gland sealing nut to 22 in-lbs.

Refer to the **Mechanical Quick Start Guide** or the complete instruction manual for details on mechanical installation.

Menu System

1.2345678 TOTAL
CU FT
100 RATE
GPM
FORWARD TOTAL



The HOME Screen displays flow volume, direction of the flow total and flow RATE along with status conditions such as Empty Pipe. Two buttons below the LCD display are used to access menu screens for viewing and changing meter setup parameters.

These two buttons are light sensors which can detect when a finger is covering them. Only three button touch actions are needed to control navigation through the menus, settings changes and back to the home screen.



HORIZONTAL SCROLLING:

Tap right-hand button to scroll horizontally through menu tabs or move horizontally within a tab dialog when applicable.

All menu screens consist of two rows of tabs surrounding a dialog box that lets you view and change setup parameters. To enter the Menu System perform the hold and tap sequence.



SELECT: Tap left-hand button to change a highlighted item within a tab dialog.





ENTER/EXIT: Hold left button while tapping right button once to enter or exit a tab dialog or to navigate between the HOME and other menu screens.



Changing Settings



T UNIT

View or change TOTAL volume units

T UNIT R UNIT SET P DAMP
TOTAL = GALLONS
PRESS  +  TO SET TOTAL UNITS FOR DISPLAY
SET 4 SET 20 SET F EXIT



R UNIT

View or change flow RATE units

T UNIT R UNIT SET P DAMP
FLOW RATE = GALLONS/MIN
PRESS  +  TO SET RATE UNITS FOR DISPLAY
SET 4 SET 20 SET F EXIT



Set P

View or change pulse output scaling

T UNIT R UNIT SET P DAMP
00001.0 GALLONS
PRESS  +  TO SET GALLONS TOTALIZED PER PULSE SENT OUT PULSE1
SET 4 SET 20 SET F EXIT



DAMP


View or change # of samples for rolling average.

T UNIT R UNIT SET P DAMP
DAMPING = 1
PRESS  +  TO SET DAMPING VALUE
SET 4 SET 20 SET F EXIT

EXIT

Return to HOME SCREEN or enter SUBMENU

T UNIT R UNIT SET P DAMP
PRESS  +  EXIT MENU AND RETURN TO FLOW DISPLAY
SET 4 SET 20 SET F EXIT

The EXIT tab in the MAIN MENU has a second function. If you tap  five times, you will be redirected to a SUBMENU screen from which you can access additional options.

INFO: Meter model, serial number, firmware version