 


When using a sensor with a vent tube, you should always protect against moisture incursion with either a desiccant tube or a bellows kit.

 
Mounting Aneroid Bellows

- Mount the bellows with two screws to a firm surface.
- Protect from sunlight as ultra-violet light (UV) will cause the bellows to deteriorate.
- Mount where bellows can expand and contract freely without obstruction.
- Be sure the bellows is neither compressed nor fully extended when attaching to vent tube.

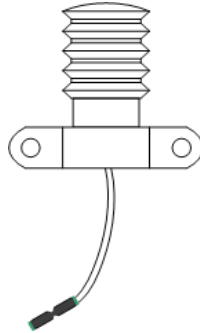


Replacing a Desiccant Tube with Aneroid Bellows

- Depress black ring on connector at top of desiccant tube and pull gently on the vent tube to remove it from the desiccant tube. (Note: The connector ring may be green rather than black on some units.)

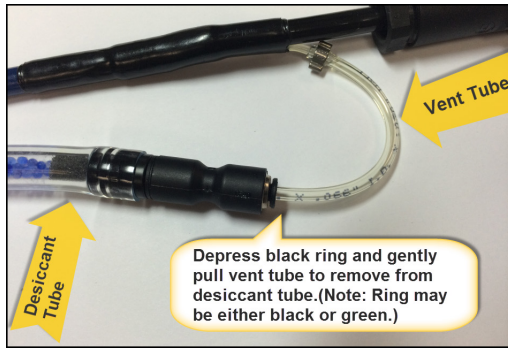

 
- Attach vent tube to connector on the end of the bellows tube by pushing vent tube into the opening in connector.

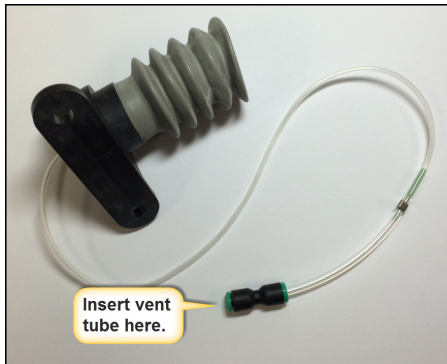

When using a sensor with a vent tube, you should always protect against moisture incursion with either a desiccant tube or a bellows kit.


Mounting Aneroid Bellows

 - Mount the bellows with two screws to a firm surface.
- Protect from sunlight as ultra-violet light (UV) will cause the bellows to deteriorate.
- Mount where bellows can expand and contract freely without obstruction.
- Be sure the bellows is neither compressed nor fully extended when attaching to vent tube.

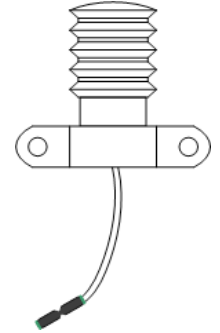

Replacing a Desiccant Tube with Aneroid Bellows

 - Depress black ring on connector at top of desiccant tube and pull gently on the vent tube to remove it from the desiccant tube. (Note: The connector ring may be green rather than black on some units.)

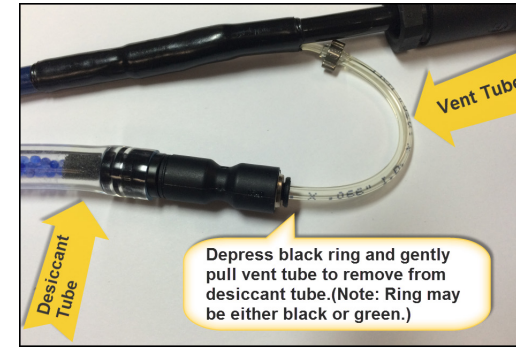

- Attach vent tube to connector on the end of the bellows tube by pushing vent tube into the opening in connector.

